

WIRED AUTOMATIC WATER LEVEL CONTROLLER (SINGLE AND THREE PHASE)

OUR UNIT DIAGRAM :



Motor con water Level Controllers for Industrial as well as Domestic / Commercial applications. The water level indicator employs a simple mechanism to detect and indicate the water level in the overhead tank or any other water container.

FEATURE :

- Potential free contact inputs for sensors.
- Plastic molded magnetic sensors optional LED indications for sensor status.
- Relay output to switch pump on off.
- Manual Override Switch.
- Compact wall mount unit.
- True Sensing technology with 2 level indication of over head tank.
- Once if the water level reached the minimum predetermined level, this is indicated by low level indication(red)
- When water is pumping to over head tank it shows Motor on indication (green). This indicates the device get started functioning.
- Once if water reaches the top level the motors returns to off state, it shows indication by top level (yellow).
- Switches OFF the pump when the water level reaches the minimum level in the underground tank therefore prevent motor life. This is indicated by only UNIT ON led (red) only glow.
- Shall again switch ON the Pump when there is Sufficient Water in the Underground Tank [SUMP], this is indicated by sump indication(red).
- Press button available for manual/reset.

SPECIFICATIONS :

- Input voltage:230V
- Max. output:2.5 hp
- Working range: up to 500 meters , Wireless operation.

ADVANTAGE :

- No Tension of Turning ON/OFF Pump
- Pump turns ON at right time
- Overhead Tank remains Full
- No Water Wastage; No Power Wastage
- Water Level Indicator for Overhead Tank
- No current / voltage are passed through water, therefore any electrolysis. Salt deposition.

MAGNETIC FLOAT SENSOR :



FEATURES :

Plastic Float Switch Protect You From Electric Shock In Water Tank
Unlike Metal Probes

SENSOR FUNCTION :

- ◆ When there is no water in the Tank - There is no Contact (Circuit is Open)
- ◆ When water touch the sensor or if the sensor is immersed in water - There is Contact (Circuit is closed)

◆ Material : Polypropylene (PP) .

SUMP FLOAT :




DRY RUN SWITCH :




WORKING PRINCIPLE :


1. The switch can be mounted with the tank to provide water level sensing
2. The switch can be mounted at the mouth of the water pipe (the pipe that opens to the over head tank), it can be mounted at that place to act as dry run switch.

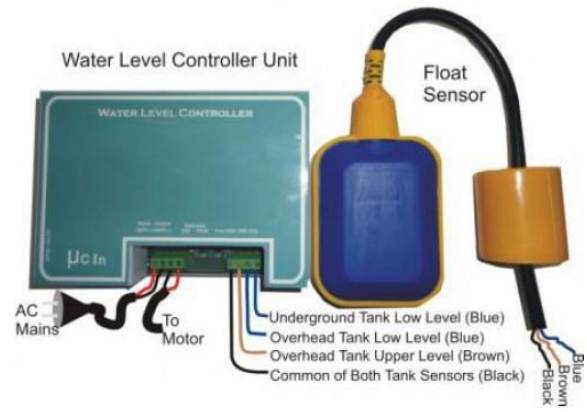


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER [Borewell to OHT with dry run] (single phase)

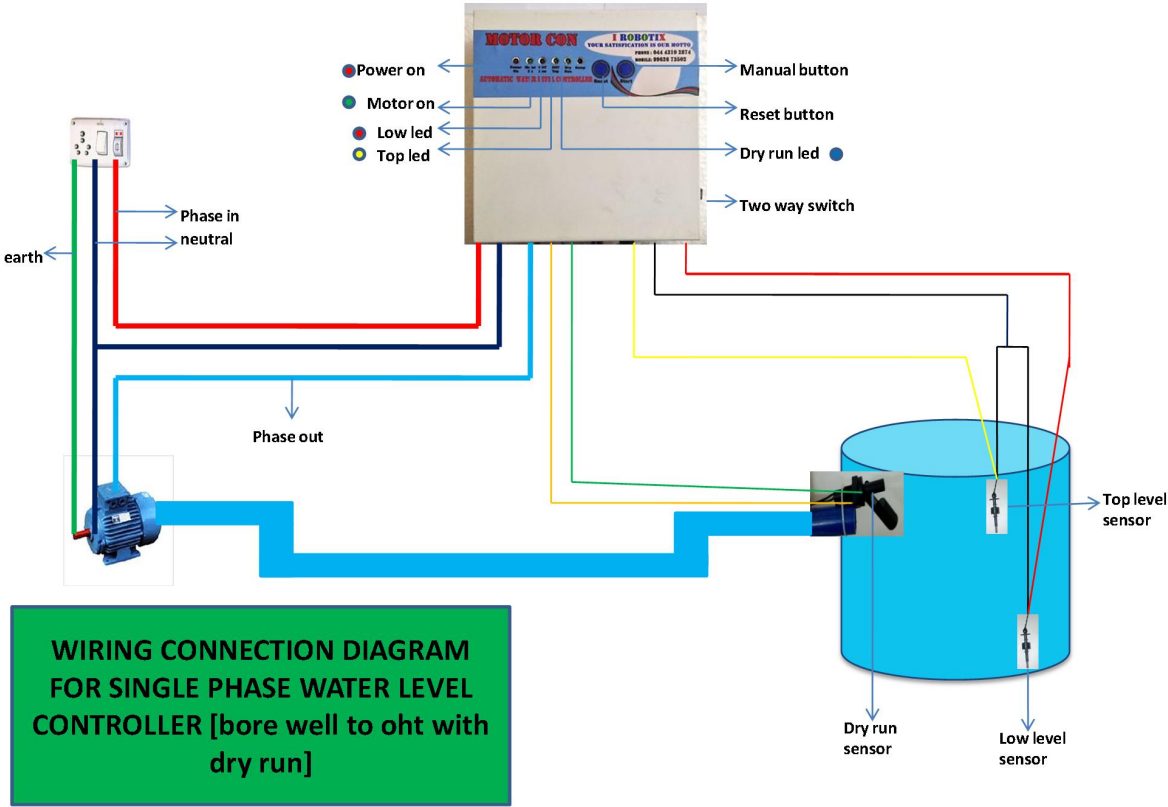


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER : [Bore well To OHT] (single_phase)

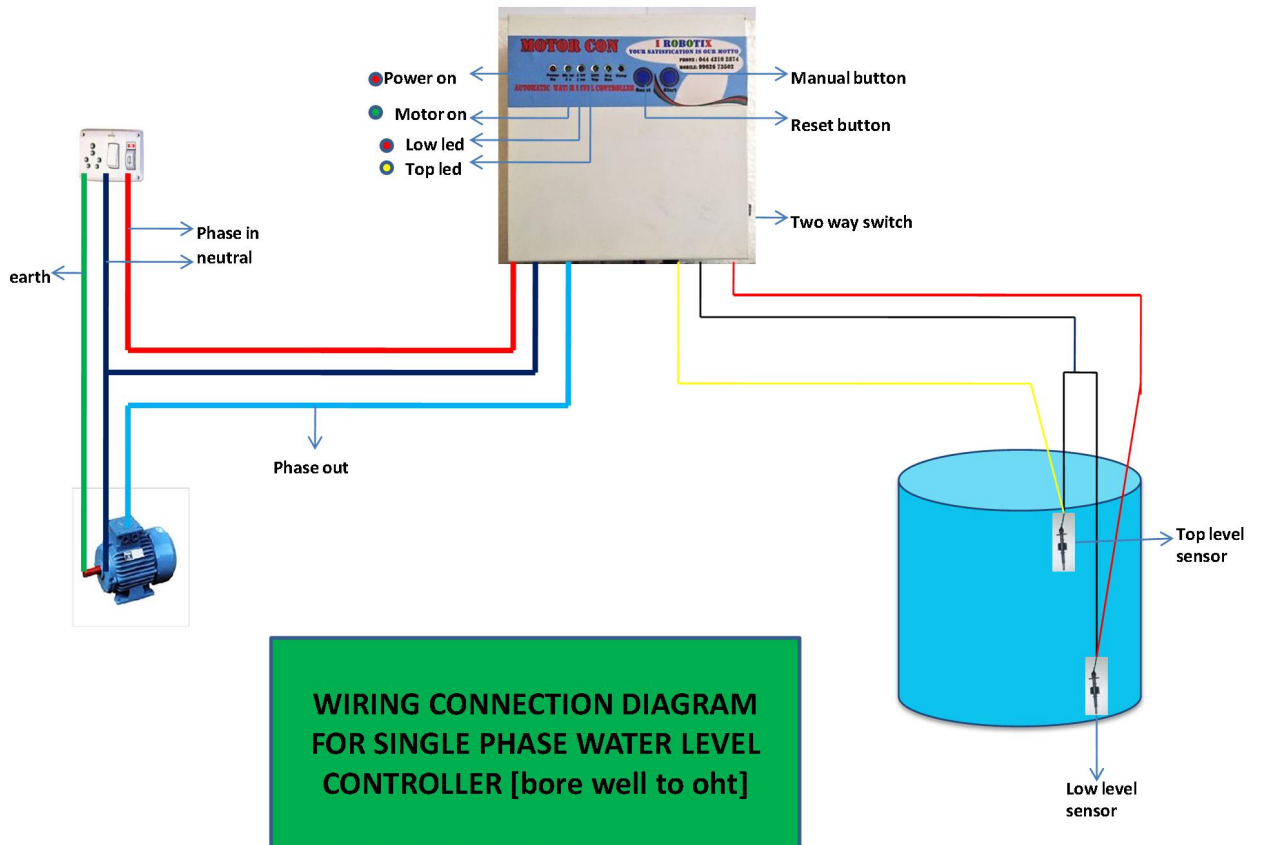



COMPLETE CONNECTION OF WATER LEVEL CONTROLLER [Sump To OHT] (Single Phase)

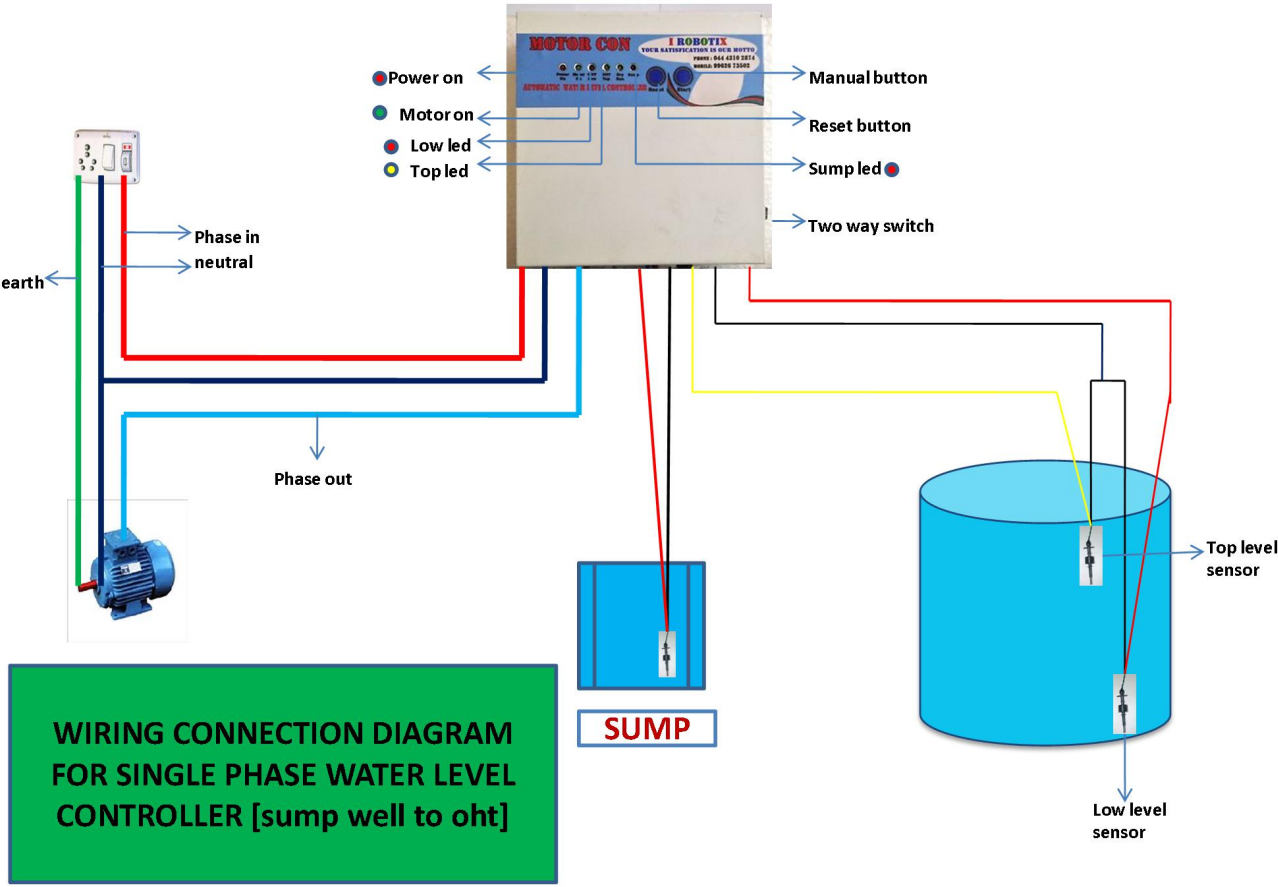


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER : [Sump To OHT with Dry Run] (single_phase)

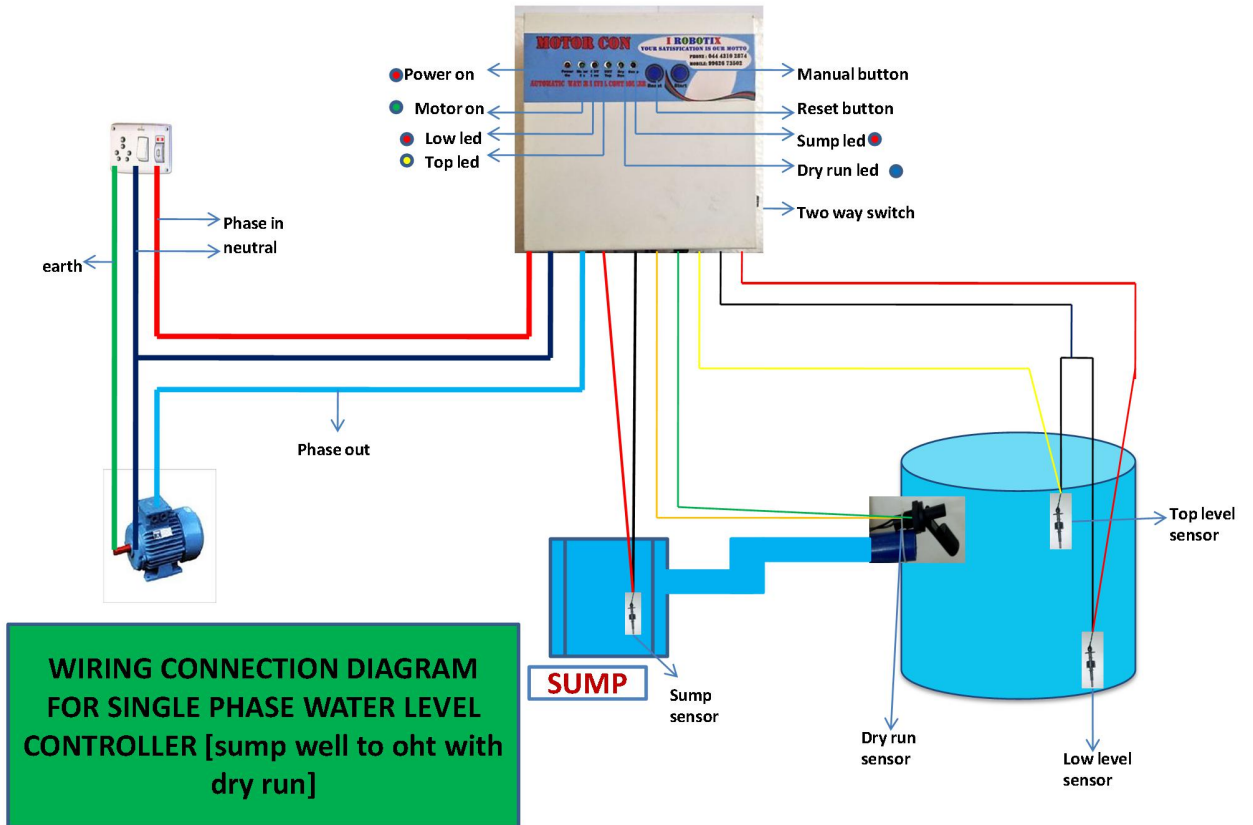


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER [Borewell To OHT] (Three phase)

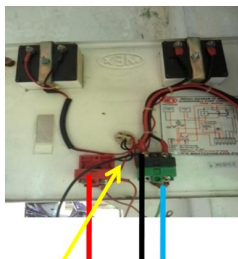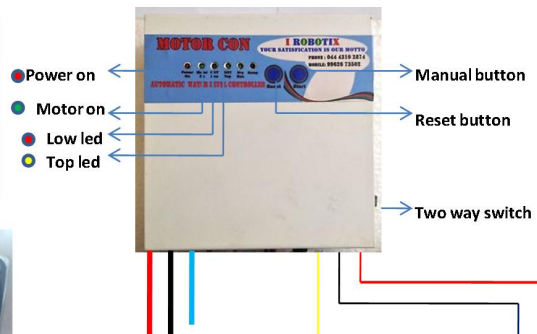

Disconnect jumper wires between green button to red button

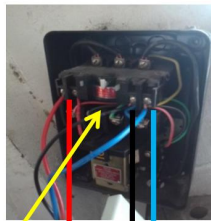

Remove series connection between red and blue wires


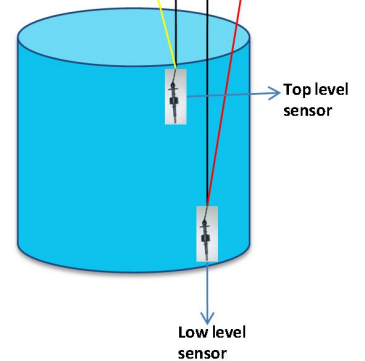


PANEL CONNECTION DETAILS:

FOR SUMERSIBLE AND STAR DELTA PANEL:
Disconnect the jumper /series connection between the start and stop button.
In the **start button** connect the **BLUE** wire to the **NO** and connect the **BLACK** wire to the **NC**, finally connect the **RED** to the **stop button** (from where **jumper wire** removed).

WIRING CONNECTION DIAGRAM FOR THREE PHASE WATER LEVEL CONTROLLER [bore well to oht with dry run]


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER [sump to oht] (Three Phase)

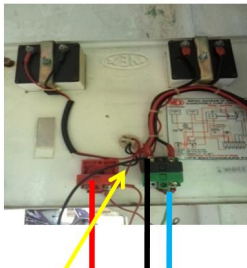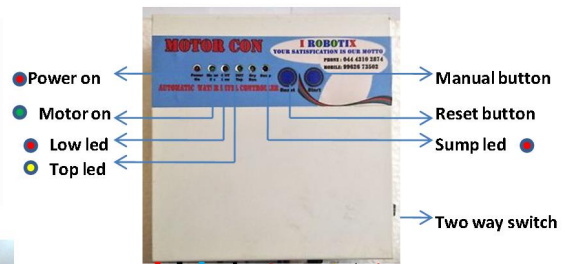


Disconnect jumper wires between green button to red button



Remove series connection between red and blue wires

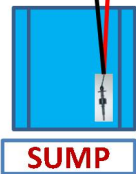


SUMP

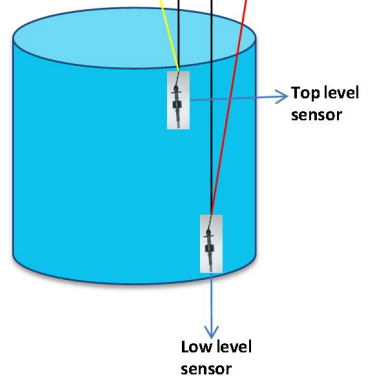


WIRING CONNECTION DIAGRAM FOR THREE PHASE WATER LEVEL CONTROLLER [sump to oht]

PANEL CONNECTION DETAILS:
FOR SUMERSIBLE AND STAR DELTA PANEL:
Disconnect the jumper /series connection between the start and stop button.
In the **start button** connect the **BLUE** wire to the **NO** and connect the **BLACK** wire to the **NC**, finally connect the **RED** to the **stop button** (from where **jumper wire** removed).


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER : [Bore well To OHT with DryRun] (Three Phase)

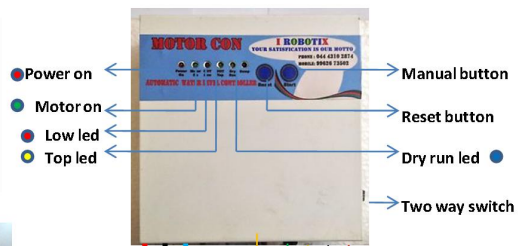

Disconnect jumper wires between green button to red button

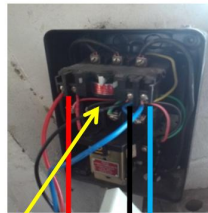

Remove series connection between red and blue wires

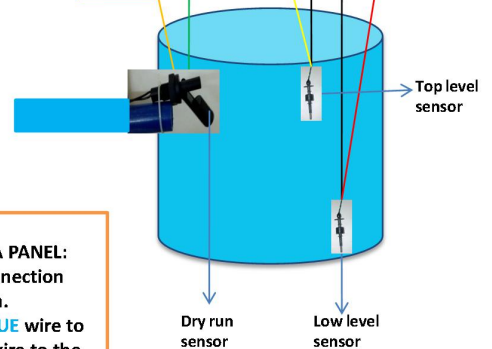

PANEL CONNECTION DETAILS:


FOR SUMERSIBLE AND STAR DELTA PANEL:
Disconnect the jumper /series connection between the start and stop button.
In the **start button** connect the **BLUE** wire to the **NO** and connect the **BLACK** wire to the **NC**, finally connect the **RED** to the **stop button** (from where **jumper wire** removed).

WIRING CONNECTION DIAGRAM FOR THREE PHASE WATER LEVEL CONTROLLER [bore well to oht with dry run]


COMPLETE CONNECTION OF WATER LEVEL CONTROLLER [sump to oht with dry run] (Three Phase)




- Power on ←
- Motor on ←
- Low led ←
- Top led ←
- Manual button
- Reset button
- Sump led ●
- Dry run led ●
- Two way switch

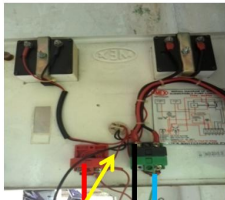

Disconnect jumper wires between green button to red button

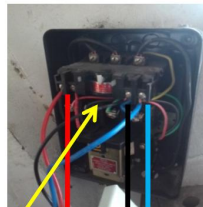

Remove series connection between red and blue wires

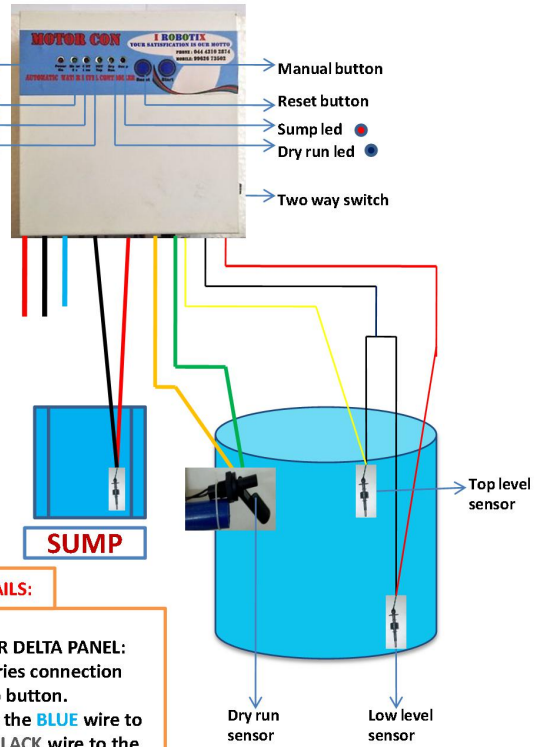

PANEL CONNECTION DETAILS:

FOR SUMERSIBLE AND STAR DELTA PANEL:
Disconnect the jumper /series connection between the start and stop button.
In the **start button** connect the **BLUE** wire to the **NO** and connect the **BLACK** wire to the **NC**, finally connect the **RED** to the **stop button** (from where **jumper wire** removed).

WIRING CONNECTION DIAGRAM FOR THREE PHASE WATER LEVEL CONTROLLER [sump to oht with dry run]